
FIXTURE INSTALLATION

Important: Read all instructions in order to ensure safety and proper installation.

DO NOT operate this product under any conditions other than those for which it is specified. Failure to observe these precautions can lead to electrical shock, product failure, or other problems.

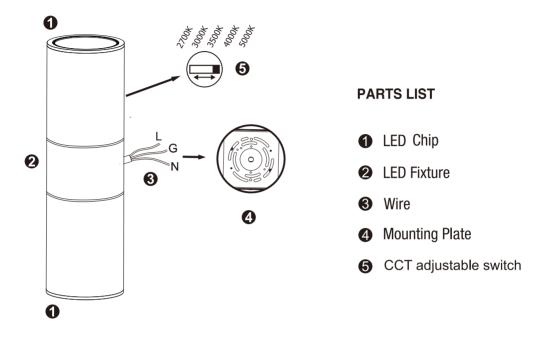

Specification	Power	Voltage	Length	Width	Height	Equivalent to
14-Inch Up and Down Wall Lamp	24 W	100-277V AC	356mm	108mm	170mm	180W

MAINTENANCE

READ ALL INSTRUCTIONS IN ORDER TO ENSURE SAFETY AND PROPER INSTALLATION.

- 1. DO NOT operate this product under ANY conditions other than those specified for it. Failure to observe these precautions can lead to electrical shock, product failure or other problems.
- 2. TURN OFF THE POWER at the electrical panel before installation or maintenance.
- 3. DO NOT modify this fixture. ANY modifications may render the product unsafe and void the warranty.
- 4. This product is rated for outdoor use.

Limited Warranty

The warranty applies to the product from the original date of purchase for three (3) years against manufacturing defects. The owner must provide a copy of the original proof of purchase. The manufacturer 's obligation under this warranty is limited to repairing or replacing the component. It is not related in any way to the cost of the connection, the installation of the replacement parts or cost of transport.

Package Content

- •14-Inch Up and Down Wall Lamp x 1
- Wire Connectors x 3
- Screws x4
- Mouting plate x 1

INSTALLATION GUIDE

⚠ WARNING

Turn power OFF from electrical panel before installation or maintenance.

- 1. Take off the mounting bracket from the light fixture
- 2. Attached the mounting brackt to the J-box.
- 3.Adjust the switch to select the color temperature 2700K 3000K 3500K 4000K 5000K
- 4. Use push in wire connectors to connect the wires
- 5. Fix the light fixture to the mounting bracket by 2 screws on the side
- 6.Installation is done.

